







Features

- Remote actuator unit is factory-fitted on the left hand side of the DD-Frame circuit breaker
- The RAU module is designed to function on a wide voltage range: 18 Vdc to 80 Vdc
- The RAU can be supplied from main system voltage or a standalone source
- The DD-Frame circuit breaker operates on the main system voltage, AC or DC
- LED for status indication
- Selectable pulse or constant actuate signal operation
- Provides status of the load side of the circuit breaker
- Can be paired with up to a 3 pole DD-Frame circuit breaker state of circuit breaker
- Actuation of circuit breaker occurs internally
- Compact size (19 mm, matching DD-frame outline)

Applications

- Battery management
- **Telecommunications**
- Railways
- Solar
- System automation
- Switching operations in distant, inconvenient or unreachable environments

The remote actuation unit (RAU) is a factory-fitted module that enables the automated switching of a DD-Frame circuit breaker. The RAU internally actuates the circuit breaker both ON and OFF. The RAU is mounted on the left hand side of the circuit breaker and can actuate up to three poles. The RAU is available with circuit breakers with a standard toggle handle only. The unit has an LED that provides an indication of the mode of operation (PULSE or CONSTANT). A colour flag shows the position of the latch mechanism of the connected circuit breaker - green for OFF and red for ON. The RAU provides the option to set the actuation signal voltage between pulse or constant mode. This is selected by a switch situated on the front of the RAU.

Approvals

















(UL489A) (CSA C22.2 No. 5-16)

(UL489;

CSA C22.2 NO.5) CSA C22.2 NO.235-04)

IEC / EN 60934)

(IEC / EN 60947-2; (GB14048.2;

(IEC 60947-2: IEC 60934)

(IEC 60947-2)



Technical Data

Technical Data			
Product Type	RAU		
Supply voltage	18 Vdc to 80 Vdc		
Actuation signal voltage	HIGH (ON)	Min. 3.3 Vdc to Max. 60 Vdc	eet
(For other voltages refer to page 11)	LOW (OFF)	Min. 0.0 Vdc to Max. 0.5 Vdc	a Sh
Starting current	< 2	250 mA	Frame Circuit Breaker Data Sheet
Number of poles that can be actuated	1 to 3 pole DD-F	Frame - factory fitted	aker
Ambient operating temperature	-40°C	C - +65°C	Brig
Tourism and an elementary times	OFF state to ON state	2 seconds	cnit
Typical actuation time	ON state to OFF state	1 second	Ö
Dawar aanaumatian	Idle mode < 250 mW		ram
Power consumption	During actuation	< 7.5 W] 6
Number of operations	In exce	ess of 2000	per DD
Flammability	I3 No flames persistence at 850 °C		as
Toxicity	F2 - Smoke index of ≤ 40		alnes
Pollution degree	PD2 - Normally only non-conductive pollution occurs. Temporary conductivity caused by condensation is to be expected.		All values
Signal Out Resistance to LOAD terminal	330 kΩ	±5% (2 W)	

Product Type	Circuit Breaker	Circuit Breaker	Circuit Breaker	Circuit Breaker
Approvals	IEC / EN 60947-2, GB14048.2, CE, UKCA	IEC / EN 60947-2, GB14048.2, CE, UKCA	IEC60947-2, CE, UKCA	AS/NZS 60947-2, UKCA
Number of Poles	RAU + 1, RAU + 2, RAU + 3	RAU + 2, RAU + 3	RAU + 1, RAU + 2, RAU + 3	RAU + 1, RAU + 2
Maximum Voltages	240 / 415 Vac, 80 Vdc	80 Vdc	60 Vdc	125 Vdc
Current Ratings	0.1 - 60 A(ac) 0.1 - 100 A(dc)	110 - 250 A	125 A, 250 A, 300 A	0.1 - 60 A
Ics	5 kA (DC),1.25kA (AC)	5 kA	2.5kA	2.5kA
Icu	3 kA (AC) 5 kA (AC) 10 kA (DC)	10 kA	5 kA	5 kA

Product Type	Product Type Circuit Breaker		Circuit Breaker
Approvals	UL489	UL489 A, CSA C22.2 No. 5-16	UL489A, CSA C22.2 No. 5-16
Number of Poles	mber of Poles RAU + 1, RAU + 2, RAU + 3		RAU + 2, RAU + 3
Maximum Voltages	120 Vac, 120 / 240 Vac, 240 Vac, 80 Vdc	60 Vdc	80 Vdc
Current Ratings	0.1 - 80 A(ac) 0.1 - 100 A(dc)	125 A, 250 A, 300 A	110 - 250 A
AIC	AC - 10 kA, DC - 20 kA	14 kA	20 kA

Product Type	Circuit Breaker	Circuit Breaker
Approvals	IEC / EN 60934, CE, GB17701	UL1077, cURus
Number of Poles	1 - 4	1 - 6
Maximum Voltages	240 / 415 Vac, 80 Vdc	277 / 480 Vac, 80 Vdc
Current Ratings	0.1 A - 100 A (1 p), 0.1 A - 70 A (2 - 3 p)	.1 A - 100 A (1 p), 0.1 A - 70 A (2 - 4 p)
Interrupting Capacity	-	2 kA/U2/ U3 (AC) 5 kA/C1 (AC) 5 kAU2/ U3 (DC)
Rated conditional S/C	3 kA (AC) PC1, 5 kA (DC) PC1	•
Icm	-	-

Verify approvals for specific ratings in accordance with the relevant test certificate

Torque Table

Description	Size	Torque Value
Front Inserts	M3	0.5 - 0.8 N.m
Front inserts	6 - 32	5 - 7 lbf.in
	M5	2.0 - 2.8 N.m
Rear Studs	10 - 32	18 - 24 lbf.in
Real Studs	M6	3.5 - 4.0 N.m
	1/4 - 20	30 - 35 lbf.in
Flush Rear Screws	M5	1.7 - 2.3 N.m
Lingii vedi ociama	10 - 32	15 - 20 lbf.in



	Aux Switch Specification		
Gold DB3	EN61058 0.1 A @ 250 Vac & 0.1 A @ 80 Vdc and UL1054 0.1 A @ 125/250 Vac & 0.1 A @ 30 Vdc & 0.3 A @ 60 Vdc		
Silver DB2	EN61058 10 A @ 250 Vac & 0.1 A @ 80 Vdc and UL1054 10 A @ 125/250 Vac		
Silver V4D	EN61058-1 10 A @ 250 Vac		

Ordering Information

Group 1:	Code	Description		Comments				
Frame	D		DD-Frame RAU					
Group 2:	Code		Description			Co	mments	
Туре	7	RAU Non-Lockout type (18 - 80 Vdc) Fitted on Left of Circuit Breaker		RAU D7 + 1st Circuit Breaker pole				
	2	Additional Circuit Breaker pole		Maximum of 2 additional Circuit Breaker poles				
Group 3:	Code		Description		Comments			
Mounting	Α	Front Mount, Rectan		ndard Toggle Handle	Maxim	um penetration depth into the		Inting screw is 6mm
Group 4:	Code		Description				mments	
Handle Type or Blank for Reduced Handle	А	Sta	andard Toggle Hand	lle		Standard Toggle Handle, g	oes to Off Position w	hen tripped
Group 5:	Code		Description			Comments		
Termination	3X		Terminal (dia 7.8 m	<u> </u>	100 A Max per terminal (80 Vdc) & 125 A Max per terminal (60 Vdc). Ensure the connector has sufficient space so as not to interfere with the terminal bar			
	4X		Screw Terminal, (M				x per terminal	
	5X		onnect Terminal (0.8				x per terminal	
	AX		Terminals, (M5 or 10				x per terminal	
	MX	Stud 1	Terminals, (M6 or 1/4	1 - 20)			ax per terminal	
Group 6:	Code		Description				mments	
Total No. of Poles	2		IC - RAU + 1 DD Ci				modules in total	
	3	Three pole – METR		<u> </u>			modules in total	
	4	·	IC - RAU + 3 DD Ci	· · · · · · · · · · · · · · · · · · ·			modules in total	
	B C		IAL - RAU + 1 DD C	<u> </u>		·	modules in total	
	D	Four pole – IMPER		Circuit Breaker poles			modules in total	
Group 7:	Code	roui pole – livireki	Description	ircuit breaker poles				
Rated Voltages	H	Description 125Vdc		Comments 0.1 A - 60 A Max. (Single pole only)				
and Frequency -	J	125Vdc 120Vac, 240Vac (Applicable to Listed Single Pole DD Frame Circuit Breaker)						
Main Circuit	K	, (11	Applicable to Recognized Single Pole DD Circuit breaker		Refer to Certificates for Approval details Refer to Certificates for Approval details			
	М	, , , , , ,	AC & DC Application for Multipole Units (80 Vdc, 240Vac, 240/415 Vac & 277/480 Vac)		Refer to Certificates for Approval details			
	N		80 Vdc			Refer to Certificat	tes for Approval detai	ils
	R		c, 240 Vac, 240/415 Vac; 277/480 Vac e to Recognized Multipole Products)			Refer to Certificates for Approval details		ils
	S		Vac, 240 Vac or 240 to Listed Multipole			Refer to Certificates for Approval details		ils
	V		60 Vdc			No Trip Alarm, Mid Trip		
Group 8: Time Delay Characteristics	Code	Description	System	Pulse Tolerance (X In)	Code	Description	System	Pulse Tolerance (X In)
(Pulse Tolerance @ 10 ms)	AD	Long delay 50 / 60 Hz AS & dual rated	AC and DC	8 - 10	CH	Short delay 50 / 60 Hz CS & high inrush	AC	12 - 15
	BD	Medium delay 50 / 60 Hz BS & dual rated Short delay 50 / 60 Hz	AC and DC	8 - 10	AS	Long delay 50 / 60 Hz	AC or DC	8 - 10
	CD	CS & dual rated	AC and DC	6 - 8	BS	Medium delay 50 / 60 Hz	AC or DC	8 - 10
	AE	Long delay 50 / 60 Hz AH & inertia delay Medium delay 50 / 60 Hz	AC	28 - 35	CS	Short delay 50 / 60 Hz Long delay 50 / 60 Hz	AC or DC	6 - 8
	BE	BH & inertia delay Short delay 50 / 60 Hz	AC	28 - 35	AW	AD & inertia delay Medium delay 50 / 60 Hz	AC and DC	16 - 20
	CE	CH & inertia delay Long delay 50 / 60 Hz	AC	28 - 35	BW	BD & inertia delay Short delay 50 / 60 Hz	AC and DC	16 - 20
	Al	AS & inertia delay Medium delay 50 / 60 Hz	AC or DC	16 - 20	CW	CD & inertia delay	AC and DC	12 - 15
	BI	BS & inertia delay Short delay 50 / 60 Hz	AC or DC	16 - 20	H3	Short delay Instantaneous trip 50 /	DC	6 - 8
	CI	CS & inertia delay Long delay 50 / 60 Hz	AC or DC	12 - 15	OP	60 Hz	AC or DC	None
	AH	AS & high inrush Medium delay 50 / 60 Hz	AC	16 - 20	OX	Switch 50 / 60 Hz	AC and DC	
	BH	BS & high inrush	AC	16 - 20				

Continues on page 4




Ordering Information

		D 1.0	•
Group 9: Main Circuit	Code	Description	Comments
Current	XXXX	No current, for voltage trip poles	
	100M	0.1 A	Charlie Amnora rating pagaible from 0.1 A to 250 A (00 \/da)
	0100	1 A	Specific Ampere rating possible from 0.1 A to 250 A (80 Vdc) 300 A (60 Vdc)
	1000	10 A	33371(33 743)
	K250	250 A	
Group 10:	Code	Description	Comments
Circuit	BX	Circuit Breaker (Series Trip Current Sensing)	
Configuration	KX	Circuit Breaker with Auxiliary Switch	
(circuit breaker's internal	IVX	Officult breaker with Auxiliary Gwitch	
construction)	MX	Circuit Breaker with Trip Alarm, but NO Mid Trip (Reversed Function - Latch Type)	Handle goes to OFF position when tripped and send a Trip Alarm
Group 11:	Code	Description	Comments
Auxiliary and		DB3-Gold Tips, Equally Spaced Terminals, 2.75 mm (0.108") - EN61058	
Alarm Switches	Α	0.1 A @ 250 Vac & 0.1 A @ 80 Vdc and UL1054 0.1 A	
Types & Options (Refer to		DB2-Silver Tips, Equally Spaced Terminals, 2.75mm (0.108") - EN61058	
Aux switch	В	10 A @ 250 Vac & 0.1A @ 80 Vdc and UL1054 10A	
specification on	С	V4D - Silver Tips, Offset Terminals, 4.75 mm (0.189") - (10 A @ 250 Vac)	
page 2)	М	Parallel Bridge Housing - For all Parallel Bridged Poles	Use M for ALL Parallel Bridged Products
	Х	Not Applicable	,
Group 12:	Code	Description	Comments
Voltage and	Code	Description	Comments
Current Ratings for Dual Control, Shunt and Relay Trip Construction	xx	Not applicable	
Group 13:	Code	Description	Comments
Terminal Options	Code	Description	Comments
for Dual Control, Shunt and Relay Coils	х	Not applicable	
Group 14:	Code	Description	Comments
Future Use		•	Commonto
	Х	Not applicable	
Group 15:	Code	Description	Comments
Customer Specific	X	Not applicable	
Specific	S	Customer Specific Product	
Group 16:	Code	Description	Comments
Handle Colour		•	
	В	Black handle, white marking.	Standard Toggle handle only
	w	White handle, black marking	Standard Toggle handle only
Group 17:	Code	Description	Comments
Handle Markings	D	I - O/On - Off	
Craum 40.			Comments
Group 18: Mounting	Code	Description	Comments
Orientation for Marking	V	Vertical, Standard Mounting, Line at the Top	
Group 19:			
Uroup 13.	Code Description		Comments
Front Plate	Code	Description	Comments
	Code	Description Standard Marking on Standard Toggle handle	Comments I – O and ON - OFF and ampere rating
Front Plate Marking and Test Button	А	Standard Marking on Standard Toggle handle	I – O and ON - OFF and ampere rating
Front Plate Marking and Test Button Group 20: Inter-phase	A Code	Standard Marking on Standard Toggle handle Description	
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and	A Code	Standard Marking on Standard Toggle handle	I – O and ON - OFF and ampere rating
Front Plate Marking and Test Button Group 20: Inter-phase	A Code	Standard Marking on Standard Toggle handle Description	I – O and ON - OFF and ampere rating
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and	A Code	Standard Marking on Standard Toggle handle Description Terminal cover(s)	I – O and ON - OFF and ampere rating
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and	A Code 1 2 3	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large	I – O and ON - OFF and ampere rating
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and	A Code 1 2 3 4	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large Inter-phase barrier & terminal cover - Z type	I – O and ON - OFF and ampere rating
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and	A Code 1 2 3 4 A	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large Inter-phase barrier & terminal cover - Z type Inter-phase barrier - small	I – O and ON - OFF and ampere rating Comments
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and	A Code 1 2 3 4 A B	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large Inter-phase barrier & terminal cover - Z type Inter-phase barrier - small Inter-phase barrier - large	I – O and ON - OFF and ampere rating
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and	A Code 1 2 3 4 A B C C	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large Inter-phase barrier & terminal cover - Z type Inter-phase barrier - small	I – O and ON - OFF and ampere rating Comments Inter-phase barriers and terminal covers may be required for multi-pole products with
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and	A Code 1 2 3 4 A B	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large Inter-phase barrier & terminal cover - Z type Inter-phase barrier - small Inter-phase barrier - large	I – O and ON - OFF and ampere rating Comments Inter-phase barriers and terminal covers may be required for multi-pole products with UL listed and UL recognised approvals.
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and	A Code 1 2 3 4 A B C C	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large Inter-phase barrier & terminal cover - Z type Inter-phase barrier - small Inter-phase barrier - large Inter-phase barrier - Z type large Inter-phase barrier - Z type small	I – O and ON - OFF and ampere rating Comments Inter-phase barriers and terminal covers may be required for multi-pole products with UL listed and UL recognised approvals.
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and Terminal Cover	A Code 1 2 3 4 A B C C D X	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large Inter-phase barrier & terminal cover - Z type Inter-phase barrier - small Inter-phase barrier - small Inter-phase barrier - J type large Inter-phase barrier - Z type small Not applicable	Comments Comments Inter-phase barriers and terminal covers may be required for multi-pole products with UL listed and UL recognised approvals. See DD-Frame Technical Guide.
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and	A Code 1 2 3 4 A B C D X Code	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large Inter-phase barrier & terminal cover - Z type Inter-phase barrier - small Inter-phase barrier - small Inter-phase barrier - Iarge Inter-phase barrier - Z type large Inter-phase barrier - Z type small Not applicable Description	Comments Comments Inter-phase barriers and terminal covers may be required for multi-pole products with UL listed and UL recognised approvals. See DD-Frame Technical Guide. Comments
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and Terminal Cover Group 21: Approvals (Product Normally	A Code 1 2 3 4 A B C D X Code 1 1	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large Inter-phase barrier & terminal cover - Z type Inter-phase barrier - small Inter-phase barrier - small Inter-phase barrier - Iarge Inter-phase barrier - Z type large Inter-phase barrier - Z type small Not applicable Description UL recognized UL1077, CUR, IEC/EN60934, CE, UKCA	Comments Inter-phase barriers and terminal covers may be required for multi-pole products with UL listed and UL recognised approvals. See DD-Frame Technical Guide. Comments Normally certified to these specifications
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and Terminal Cover Group 21: Approvals	A Code 1 2 3 4 A B C D X Code 1 1 2 2 3 4 A B C D X Code 1 1 2 2 5 C C C C C C C C C C C C C C C C C	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large Inter-phase barrier & terminal cover - Z type Inter-phase barrier - small Inter-phase barrier - small Inter-phase barrier - Iarge Inter-phase barrier - Z type large Inter-phase barrier - Z type small Not applicable Description UL recognized UL1077, CUR, IEC/EN60934, CE, UKCA UL listed UL489, CUL, IEC/EN60947-2, CE, UKCA	Comments Inter-phase barriers and terminal covers may be required for multi-pole products with UL listed and UL recognised approvals. See DD-Frame Technical Guide. Comments Normally certified to these specifications Normally certified to these specifications
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and Terminal Cover Group 21: Approvals (Product Normally	A Code 1 2 3 4 A B C D X Code 1 1	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large Inter-phase barrier & terminal cover - Z type Inter-phase barrier - small Inter-phase barrier - small Inter-phase barrier - Iarge Inter-phase barrier - Z type large Inter-phase barrier - Z type small Not applicable Description UL recognized UL1077, CUR, IEC/EN60934, CE, UKCA	Comments Inter-phase barriers and terminal covers may be required for multi-pole products with UL listed and UL recognised approvals. See DD-Frame Technical Guide. Comments Normally certified to these specifications
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and Terminal Cover Group 21: Approvals (Product Normally Approved to) Group 22:	A Code 1 2 3 4 A B C D X Code 1 1 2 2 3 4 A B C D X Code 1 1 2 2 5 C C C C C C C C C C C C C C C C C	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large Inter-phase barrier & terminal cover - Z type Inter-phase barrier - small Inter-phase barrier - small Inter-phase barrier - Iarge Inter-phase barrier - Z type large Inter-phase barrier - Z type small Not applicable Description UL recognized UL1077, CUR, IEC/EN60934, CE, UKCA UL listed UL489, CUL, IEC/EN60947-2, CE, UKCA	Comments Inter-phase barriers and terminal covers may be required for multi-pole products with UL listed and UL recognised approvals. See DD-Frame Technical Guide. Comments Normally certified to these specifications Normally certified to these specifications
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and Terminal Cover Group 21: Approvals (Product Normally Approved to)	A Code 1 2 3 4 A B C D X Code 1 2 3	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large Inter-phase barrier & terminal cover - Z type Inter-phase barrier - small Inter-phase barrier - small Inter-phase barrier - Iarge Inter-phase barrier - Z type large Inter-phase barrier - Z type small Not applicable Description UL recognized UL1077, CUR, IEC/EN60934, CE, UKCA UL listed UL489, CUL, IEC/EN60947-2, CE, UKCA	Comments Inter-phase barriers and terminal covers may be required for multi-pole products with UL listed and UL recognised approvals. See DD-Frame Technical Guide. Comments Normally certified to these specifications Normally certified to these specifications Normally certified to these specifications
Front Plate Marking and Test Button Group 20: Inter-phase Barrier and Terminal Cover Group 21: Approvals (Product Normally Approved to) Group 22:	A Code 1 2 3 4 A B C D X Code 1 2 3 Code	Standard Marking on Standard Toggle handle Description Terminal cover(s) Inter-phase barrier & terminal cover - small Inter-phase barrier & terminal cover - large Inter-phase barrier & terminal cover - Z type Inter-phase barrier - small Inter-phase barrier - small Inter-phase barrier - Iarge Inter-phase barrier - Z type large Inter-phase barrier - Z type small Not applicable Description UL recognized UL1077, CUR, IEC/EN60934, CE, UKCA UL listed UL489, CUL, IEC/EN60947-2, CE, UKCA UL listed UL489A, IEC/EN60947-2, CE, UKCA	Comments Inter-phase barriers and terminal covers may be required for multi-pole products with UL listed and UL recognised approvals. See DD-Frame Technical Guide. Comments Normally certified to these specifications Normally certified to these specifications Normally certified to these specifications


Verify approvals for specific ratings in accordance with the relevant test certificate





Connection Diagrams

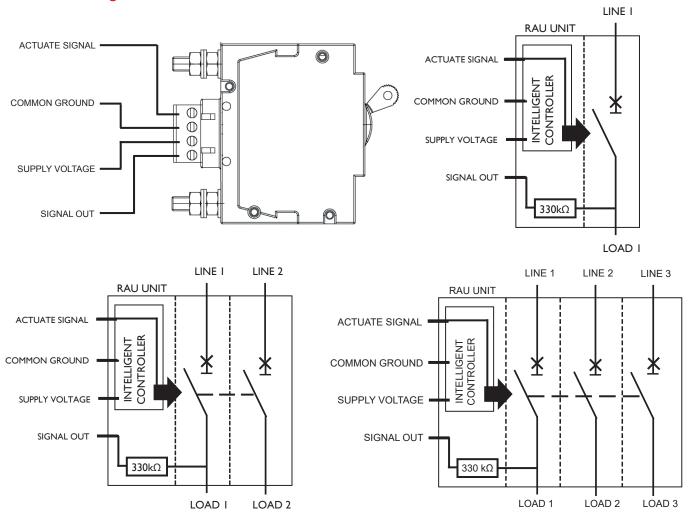

Note: Signal out only provides status indication of the adjacent pole through a 330 k Ω resistor.

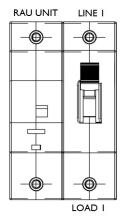

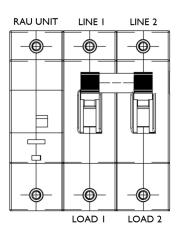

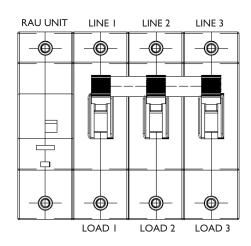




Plug compatible with DEGSON 2EDGKF-5.08-04P -14 and a PHOENIX CONTACT plug 1780002.



The RAU front switch has two positions, namely "Pulse" or "Constant". Refer to RAU Operation on page 7 for more details.

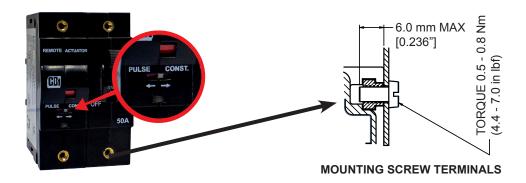

Installation Instructions

- 1. Before connecting the RAU to power, the circuit breaker must be in the OFF position and the RAU front switch must be set to the user's option of PULSE or CONSTANT.
- 2. Isolate the power to the circuit breakers.
- 3. Connect the circuit breakers as required and connect the necessary wiring for the RAU as shown in the connection diagram (page 5).
- 4. With the circuit breaker in the OFF position, activate the supply to the circuit breakers and the RAU. The LED on the RAU will flash 3 times during its initialisation process.



The RAU Operation

1. RAU initial conditions

- RAU in OFF position
- · Actuation signal OFF
- Supply voltage ON
- · LED flashes 3 times
- · RAU manual operation possible

2. Operations in PULSE mode (The LED is ON)

- Apply a pulse signal, the RAU will actuate ON
- Apply another the pulse signal, the RAU will actuate to the OFF position

3. Operations in CONSTANT mode (The LED is always OFF)

- · Apply a constant signal, the RAU will actuate ON
- · Remove the constant signal and the RAU will switch OFF

4. Changing Mode

Use a small tool to slide the front switch between CONSTANT and PULSE modes. The LED state will confirm the selection

Note: when moving the front switch from PULSE mode to CONSTANT mode while powered, may cause the breaker to inadvertently switch off, due to the signal level being low

5. Relatching

To relatch after an overcurrent trip, send a signal to turn off and back on again

NOTE:

- DO NOT move or block the circuit breaker handles while the RAU is actuating remotely.
- DO NOT change the state of the actuate signal or RAU front switch rapidly, or while the circuit breaker is in motion, allow at least a 3 seconds waiting period before changing the state.



LED Status Indication Confirmation

LED State	Indication
Flash 3 times	Initialisation
Flash 3 times every 4 seconds	Fault state
ON	Pulse actuation signal mode
OFF	Constant actuation signal mode
2 Short flash & 1 long flash	Initialisation fault

Application Notes:

RAU powered from Negative DC Bus

The DD-frame RAU requires a positive supply voltage between 18 Vdc and 80 Vdc to operate, however, systems may only have a negative voltage supply available. The RAU is able to accommodate such environments. Figure 1 shows an example of an RAU in a telecommunications application which only has a -48 Vdc bus voltage available. Resistor R is required if the potential difference between the Actuate Signal pin and the Common pin is greater than 60 Vdc.

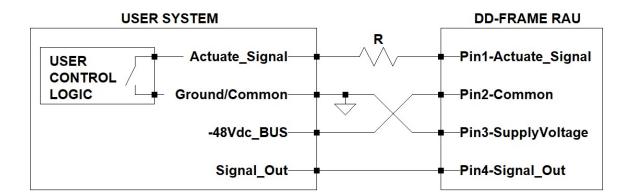


Figure 1: Wiring diagram example for DD-Frame RAU powered from negative supply bus in a -48 Vdc telecommunications application



Using the Signal Out

Signal out can have many functions and is not just an auxiliary contact to indicate the open / closed state of the circuit breaker. The signal out function will depend on its specific application. This application note will convey the function of signal out for various applications under resistive loads only.

The signal out contact is connected only to the adjacent pole LOAD side and is isolated from the control.

Note that the signal out will vary depending on the type of load and will need to be taken into consideration when designing the RAU into a system.

Table 2: Wiring Configuration

Wiring Configuration	Signal Out with reference to common when circuit breaker is open or closed	Purpose of Signal out
RAU Signal Out Rint 330k Load Load Load Load	Common Open Closed V Signal Out	Monitor status of circuit breaker
RAU Signal Out Rint Supply Load Common	Open Closed Common	Monitor status of circuit breaker
RAU Signal Out Rint Supply Load Load Load	V _{Sigral Out} Open Closed Common	Monitor status of circuit breaker
RAU Line line line line line line line line l	Common Open Closed V Signal Out	Monitor status of circuit breaker



Wiring Configuration	Signal Out with reference to RAU Common	Purpose of Signal out
RAU Line Supply RAU Signal Out Rint Rint Common	Open Closed Common	Common potential monitoring
RAU Line Supply Rint Signal Out Rau Signal Out Rint Supply Rint Supply Load	Open Closed V Signal Out	Monitor Supply
RAU Line Signal Out Supply Load Supply Common	Open Closed Common	Common potential monitoring
RAU Line by a district of the state of the s	Open Closed Common	Monitor supply



Actuation Signal Voltage Greater than 60 Vdc

The maximum actuation signal voltage that can be applied to the DD-Frame RAU is 60 Vdc. If the application is such that the actuation signal voltage will be larger than 60 Vdc, then an external resistor must be added in series as indicated in figure 2.

The value of the resistor can be designed for using the following equation:

$$R = \left(\frac{V_{\text{supply}} - 60}{0.001}\right) \text{ with deviation of } \pm 20\%$$

For example, if the actuation signal voltage will be 72 Vdc, then a 12 k Ω resistor must be added in series. See table 3.

External resistor to add in series for actuation signal voltage above

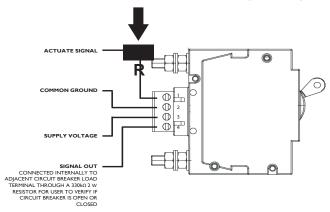



Figure 2: Side view of DD-Frame RAU indicating how to add resistor in series for actuation signal voltages above 60 Vdc

Table 3: Actuation signal voltages and corresponding resistor values to be added in series

Actuation Voltages in Volts dc	External resistor to add in series with actuate terminal (E12 series)
72	12 kΩ
80	22 kΩ


Alternatively, a voltage divider may be implemented to create a signal voltage between 5 Vdc and 60 Vdc. The minimum current required by the actuation signal input is 5 mA.

Dimensional Drawings

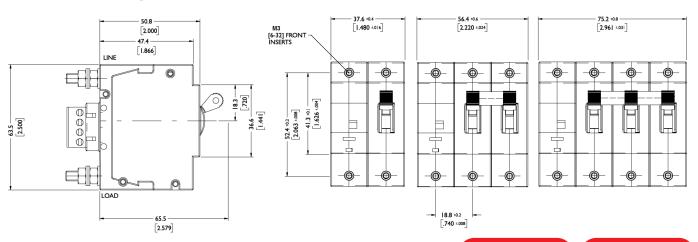





Outline Dimensions: Panel Cutout Standard Handle

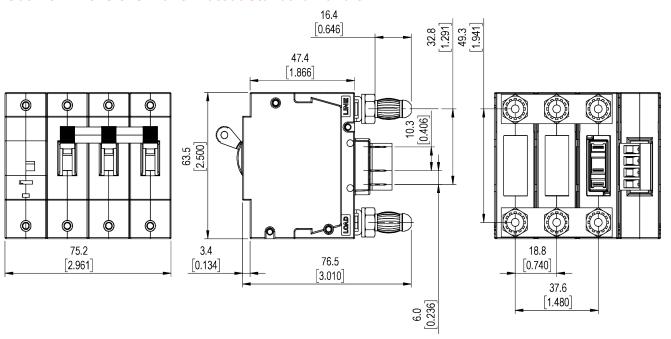

NOTES:

- TOLERANCE ± 0.4MM UNLESS STATED.
- ALL DIMENSIONS IN BRACKETS ARE IN INCH.

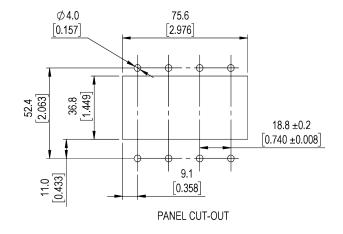



PLUG IN TYPE SIZE	Α	В	С	D
PLUG IN LARGE (7.80mm DIA)	24.3 [.957]	16.4 [.646]	7.80 [.307]	7.95 [.313]

^{*} Other plug-in version available on special request up to 80 A

PLUG-IN MATING HOLE

© CBI (Pty) Ltd. All Rights Reserved.

Please review our Customer Terms and Conditions on www.cbi-lowvoltage.co.za

All rights reserved. Unless otherwise indicated, all materials on these pages are copyrighted by CBI (Pty) Ltd. No part of these pages, either text or image may be used for any purpose other than personal use. Therefore, reproduction, modification, storage in a retrieval system or retransmission, in any form or by any means, electronic, mechanical or otherwise, for reasons other than personal use, is strictly prohibited without prior written permission. CBI (Pty) Ltd reserves the right to alter any details of this document without notice and while every effort is made to ensure the accuracy of the content, no warranty is given as to the accuracy of this document and no responsibility will be accepted for error or misinterpretation and any resulting loss

AUSTRALIA

CBI-electric: Australia

27 Wedgewood Rd, Hallam Victoria 3803 Australia Tel: +61 3 8752 9300 Fax: +61 3 9796 5407

Email: sales@cbi-electric.com.au Website: www.cbi-electric.com.au

INDIA

CBI-electric: Asia

A1, Pushpagiri Residency, 1st Cross 2nd Main, Jyothi Nagar, B.G Road Bengaluru 560083, India Tel: +91-9880553153

Email: salesasia@cbi-electric.com Website: www.cbibreakers.com Website: www.cbi-lowvoltage.com

SOUTH AFRICA

CBI-electric: low voltage

Tripswitch Drive Elandsfontein Gauteng South Africa Tel: +27 11 928 2000 Fax: + 27 11 392 2354 Email: cbi@cbi-electric.com

internationalsales@cbi-electric.com Website: www.cbi-lowvoltage.com

CBI-electric: North America

35 E. Uwchlan Ave Suite 328 Exton PA 19341 USA Tel: +1 610 524 9949 Fax: +1 610 524 9945 E-mail: info@cbibreakers.com

Website: www.cbibreakers.com

A member of the REUNERT Group